

Tascam Troubleshooting Guide



Problem: The battery keeps dying on me.

- Solution: Make sure that the phantom power switch (+48V, located on the back) is turned off if you do not need it to power an external microphone.

Problem: I am not getting any sound when the recorder is tracking.

- Solution: For internal recordings (straight off of the tascam) make sure that the input switch (upper right) is set to either Uni or Omni. For an external microphone, select XLR or Line 2 as the input depending on your connection (XLR is more common).

Problem: My audio keeps peaking but I don't want to turn down the record level.

- Solution: Turn the Auto/Limiter switch on (located in the back). This will curb levels before they hit 0db.

Problem: The recording does not sound clean/there is too much ambience in the room.

- Solution: Turn the mic gain switch, located on the back, to Low. This will improve recording quality and lower background ambiances.

Final Notes:

- Unidirectional input will record sound in a more specific direction than when it is set to omnidirectional.
- You are able to individually adjust the record levels of the right and left channel. The knobs are located on the right side of the device.