

GoPro Hero3+ Troubleshooting Guide



Basic Controls:

- Front Button: the power button, mode changer, and the way to navigate through menu options/tabs
- Top Button: The record/photo button, and the way to select options in menus
- Side Button: Accesses the GoPro app and turns on the wifi

How to Charge the Battery and Upload Footage:

- *Charge*: Connect the GoPro to the wall charger pack through a USB cable
- *Upload*: Connect the GoPro to a computer through a USB cable

Other Controls/ Settings:

- *Resolution + FPS*: Select the wrench icon and then select the first option which looks like a box with 2 double-sided arrows inside.
- *Format*: Select the wrench icon and then navigate through until you reach the garbage can icon. Select "all/format"

Connecting to the GoPro app:

- *On the GoPro*: press and hold the side button to turn the wifi on - the blue light will start blinking
- *On your smartphone*: open the GoPro app
 - Select "Connect your camera"
 - Select "sctvgph3" as your device
 - Then navigate to "settings > wifi" on your phone and select "sctvgph3" using the password: "sctvhero"
 - Go back to the GoPro app, and you will be able to control the GoPro from your phone

How to Switch Housing Doors:

- Open the housing and remove the camera
- Hold the door in one hand and the rest of the housing in the other. Slowly pull the door out from the housing, placing a bit more pressure on one side, until it pops out.
- Attach the other door by lining it up with the housing and wiggling it in until you hear a "click"
- *Helpful Tutorial*: <https://youtu.be/DTPBamNMJ1A>